

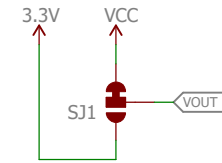


CUT TRACE ON SJ1 TO SWITCH VOUT FROM 5V TO 3.3V

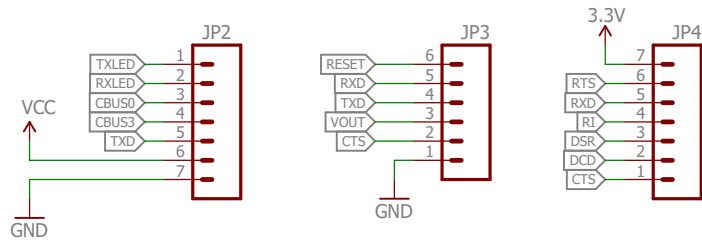

DO NOT CONNECT ALL THREE PADS ON SJ1 AT THE SAME TIME!

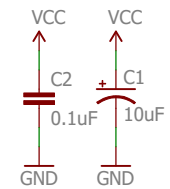

# sparkfun



Released under the Creative Commons

Attribution Share-Alike 4.0 License

<https://creativecommons.org/licenses/by-sa/4.0/>



TITLE: ft231x-breakout-v11

Design by: Jim Lindblom  
Revised by: Patrick Alberts

REV:  
V11

Date: 1/6/2016 4:37 PM

Sheet: 1/1